 


EDIFIER®

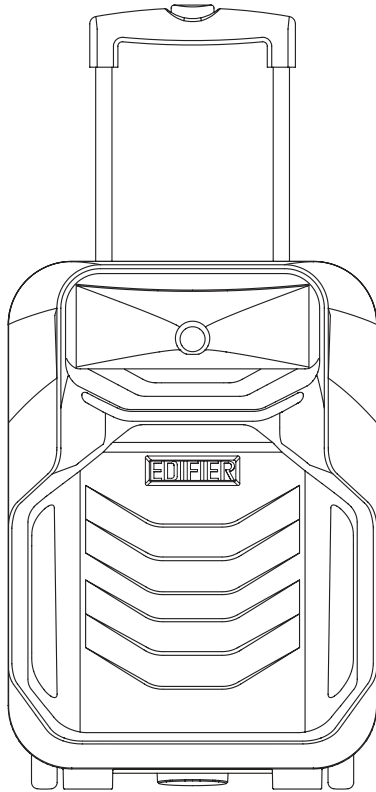

Silver series

A3-81

Portable speaker

www.edifier.com

■ Important Safety Instruction

- * Please read the instructions carefully. Keep it in safe place for future reference.
- * Use only accessories approved by the manufacturer.
- * Install the instrument properly by following the instructions in the device connection section.
- * Using the product in a 0-35°C environment is recommended.
- * To reduce the risk of fire and electric shock, do not expose the product to rain or moisture.
- * Do not use this product near water. Do not immerge the product into any liquid or have it exposed to dripping or splashing.
- * Do not install or use this product near any heat source (e.g. radiator, heater, stove, or other devices that generate heat).
- * Do not place any object filled with liquids, such as vases on the product; neither should any open fire, such as lighted candles be placed on the product.
- * Do not block any ventilation openings. Do not insert any object into ventilation openings or slots. It may cause fire or electric shock.
- * Keep sufficient clearance around the product to maintain good ventilation (minimum 5cm is recommended).
- * Do not force a plug into the jack. Before connection, check for blockage in the jack and whether the plug matches the jack and is oriented to the right direction.
- * Keep the provided accessories and parts (such as screws) away from children to prevent from being swallowed by mistake.
- * Do not open or remove the housing yourself. It may expose you to dangerous voltage or other hazardous risks. Regardless the cause of damage (such as damaged wire or plug, exposure to liquid splash or foreign object falling in, exposure to rain or moisture, product not working or being dropped, etc.), the repair has to be performed by an authorized service professional immediately.
- * Before cleaning the product with dry cloth, always turn off the product and disconnect the power plug first.
- * Never use strong acid, alkali, gasoline, alcohol, or other chemical solvents to clean the product surface. Use only neutral solvent or clear water for cleaning.



Excessively loud music may lead to hearing loss. Please keep the volume in a safe range.



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Power warning:

- * Place the product near the power outlet for easy use.
- * Before use, make sure that the operating voltage is the same as your local power supply. Correct operating voltage can be found on the product plate.
- * For safety purpose, unplug the product during lightning storms or when unused for extended periods of time.
- * Under normal conditions, the power supply may get hot. Please keep good ventilation in the area and exercise caution.
- * Safety warning labels on the housing or bottom of the product or power adaptor.



This symbol is to alert the user to the presence of un-insulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is to warn the user not to disassemble the enclosure of the product and there is no user-replaceable part inside. Take the product to an authorized service center for repair.



This symbol indicates that the product is a CLASS II or double insulated electrical device with no earth requirement.


WARNING!

- * Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.
- * For products with removable battery, the battery must be properly recycled or disposed. For products with built-in battery, disassembling is prohibited.
- * Never disassemble, hit with force, squeeze batteries or dispose of batteries in fire. Do not expose batteries in conductive materials, liquid, fire or heat. Do not let metal object contact two battery poles.
- * If the battery looks swollen, leaking, discolored, having odor or any abnormal appearance, stop using it. Do not use the battery after immersed in water.
- * Improper use of battery may lead to explosion or leakage, causing skin burn or other injuries; in the event of battery leakage, handle it with care and immediately dispose of the battery in the manner in compliance with applicable laws and regulations in your locality.

For wireless product:

- * Wireless product may generate shortwave radio frequencies and interfere with the normal use of other electronic devices or medical equipment.
- * Turn off the product when it's disallowed. Do not use the product in medical facilities, on airplane, at gas stations, near automatic gates, automatic fire alarm system or other automated devices.
- * Do not use the product in the vicinity of a pacemaker within a 20cm range. The radio waves may affect the normal operation of the pacemaker or other medical devices.


■ Box Contents

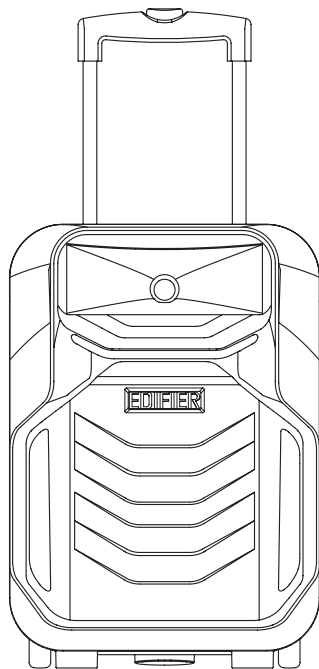

Speaker



 
Microphone bracket




Power adapter



 
Wireless microphone



User manual

 


DC power cable

 

Audio cable

 
■ Functions Description

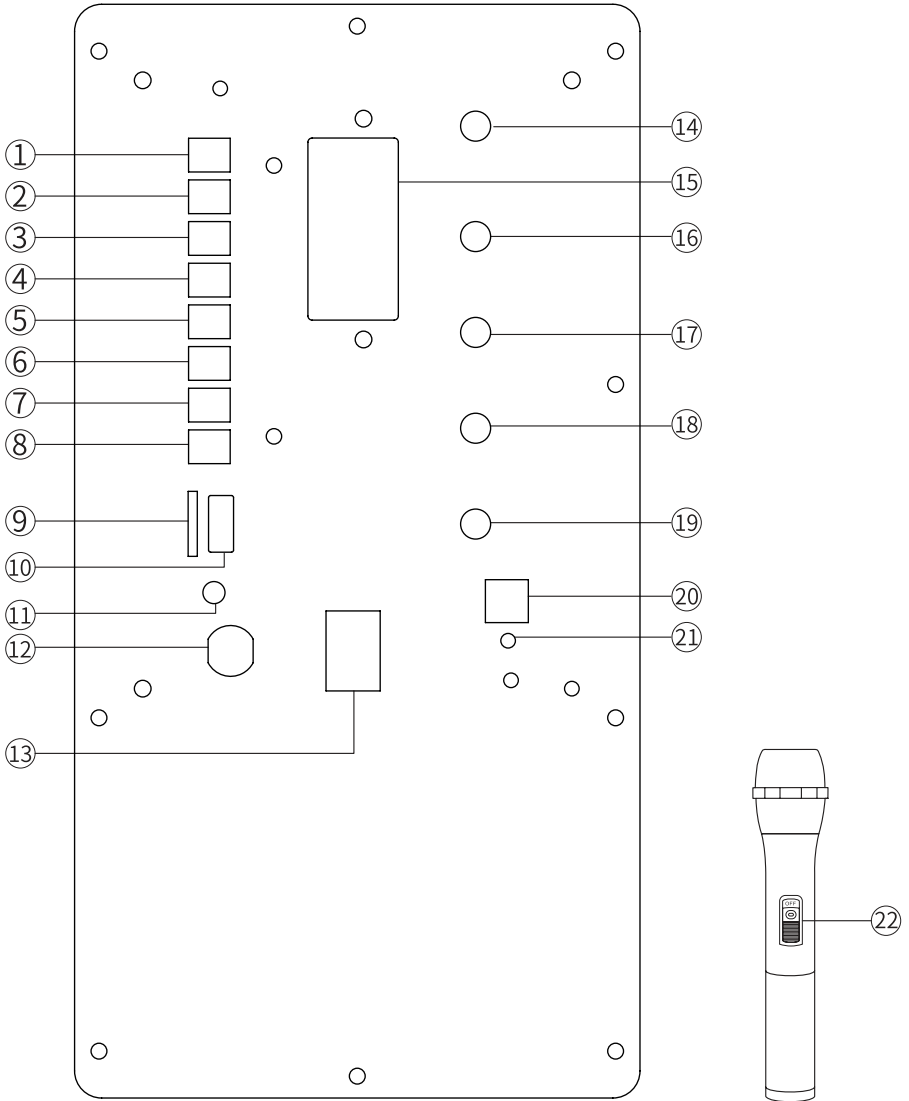

1. Recording/playback (works at Line-in and Bluetooth mode)
 Press: start recording, press any button again to stop recording;
 Press and hold: playback the recording.
2. Indoor mode: gives you a low distortion, pleasant sound;
 Outdoor mode: further sound transmission, and stronger penetration.
3. Karaoke mode (not effective at Bluetooth mode)
 Weaken the singer's voice, not 100% but depending on music files.
4. Microphone priority
 Background music volume will be reduced down when the microphone is using.
5. Previous track (works at Bluetooth/USB flash disk/microSD (TF) card mode)
6. Play/pause
 Press: play/pause (works at Bluetooth/USB flash disk/microSD (TF) card mode)
 Mute/mute off (works at Line-in mode)
 Press and hold: single loop/full loop (works at USB flash disk/microSD (TF) card mode)
7. Next track (works at Bluetooth/USB flash disk/microSD (TF) card mode)
8. Input selection
 Press: input mode switch
 Press and hold: disconnect Bluetooth at Bluetooth mode
9. microSD (TF) card input
10. USB flash disk input
11. Line input
12. Microphone input
13. Power on/off switch
14. Music volume control
15. Display screen
16. Treble control
17. Bass control
18. Reverb control
19. Microphone volume control
20. Power input
21. Charging
 (red light off = fully charged)
22. Microphone on/off switch

■ Additional Information:

15. Display screen

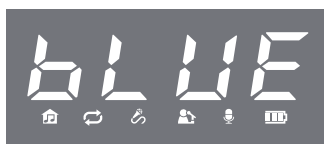

BLUE Bluetooth mode

LINE Line-in mode

Light on: indoor mode Off: outdoor mode

Light on: single loop Off: full loop


Light on: microphone priority is enabled

Light on: Karaoke mode is enabled

Light on: start recording


Battery level display

■ Connection

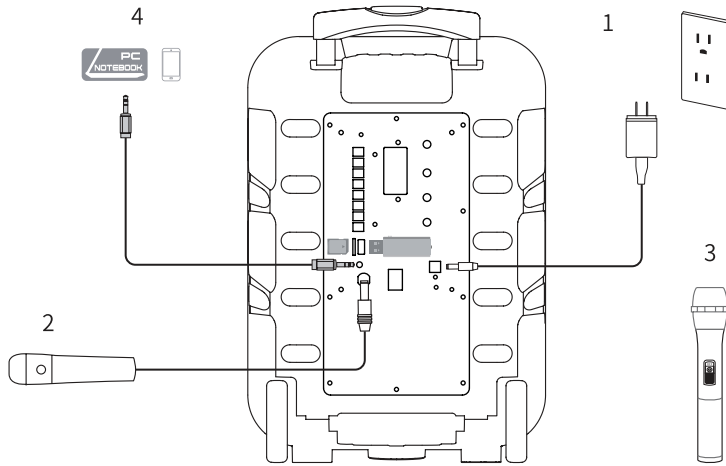

1. Connect power adapter to DC charging port for charging; and unplug power adapter after the speaker is fully charged.
 2. Insert a wired microphone (not included) into microphone input socket and turn microphone switch on, then adjust microphone volume.
 3. Turn the wireless microphone on (included); it will pair with the speaker automatically.
 4. Connect audio source device with 3.5mm jack to the line input socket using audio cable, use music volume to adjust the level.
-

■ Microphone Bracket Installation

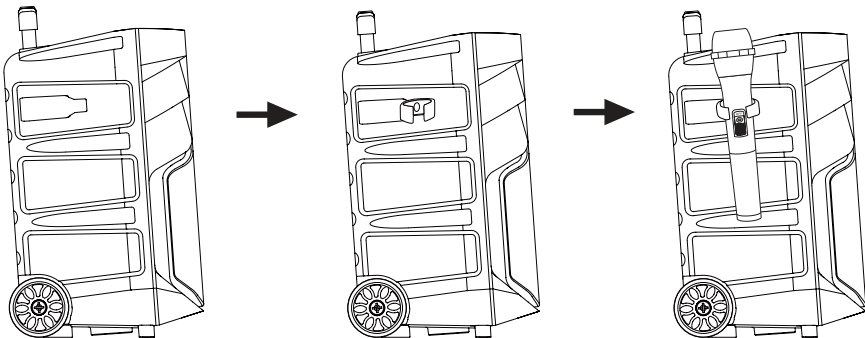

Firstly insert the microphone bracket into the groove on the left/right side of the speaker, and then place the microphone into the bracket.

■ Operational Guide

1. Connect to the audio source device.



Computer, mobile phone etc



microSD (TF) card



USB flash disk



Bluetooth devices


2. Select audio source.

- Press the “Input Selection” button to switch between Bluetooth and line input;



- When playing in Bluetooth or line-in mode, if insert an USB flash disk/microSD (TF) card, the tracks in it will be played firstly; if USB flash disk and microSD (TF) card are inserted at the same time, the latter one is preferred.
- The file formats can be played for USB flash disk/microSD (TF) card are MP3, WMA, and WAV. And the highest sampling rate supported is 48KHz; the highest bit rate supported by MP3 and WMA format is 320kbps; the highest bit rate supported by WAV format is 3072kbps; the maximum capacity supported is 64GB.

3. Connect wireless microphone or wire microphone (can be used at the same time), and follow the occasions to adjust reverb volume level (do not point the microphone too close to the speaker front).

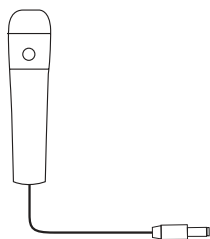

4. System is ready to use.

■ Bluetooth Input



1. Press the “Input Selection” button on the speaker to select Bluetooth mode;
2. Set your Bluetooth device (mobile phone, tablet, etc) to search and connect to “EDIFIER A3-8I”.

Note:

- * The Bluetooth function of EDIFIER A3-8I can only be searched and connected in Bluetooth input. The current Bluetooth connection will be disconnected once the speaker switches to other audio inputs. When switched back to Bluetooth input, the speaker will try to connect to the device connected last time.
- * Pin code for connection is “0000” if needed.
- * To disconnect Bluetooth, press and hold the “Input Selection” button on the speaker.
- * To enjoy all Bluetooth functions of this product, please ensure your audio source device has A2DP and AVRCP profiles.
- * Bluetooth connectivity and compatibility may be different between different source devices, depending on the software versions of source devices.

■ Specifications


Power input:	5V = 2A
Speaker impedance:	Tweeter: 6Ω Woofer: 4Ω
Dimension (W x H x D):	290 x 415 x 272mm
Net weight:	5.7kg


Frequency Band: 2.402GHz ~ 2.480GHz


RF Power output: ≤ 20 dBm (EIRP)


There is no restriction of use.


■ Troubleshooting

-  Cannot find “EDIFIER A3-81” in Bluetooth mode
- Ensure the speaker is ON.
 - Ensure the speaker is switched to Bluetooth mode.
 - Disconnect from any Bluetooth device by pressing and holding the “Input Selection” button on the speaker, and search “EDIFIER A3-81” again.
 - Turn the speaker off and restart it to switch to Bluetooth mode, searching “EDIFIER A3-81” again.
 - Effective Bluetooth transmission range is 10 meters; Please ensure that operation is within the range.
 - Try another Bluetooth device for connection.

-  No sound from the speaker
- Ensure the audio cables are firmly connected and the input is set correctly on the speaker.
 - Ensure signal output from the audio source is normal.
 - Try to turn up the volume of the speaker or audio source.
 - Turn the speaker off and restart it.

-  No sound from the microphone
- Check if batteries are installed or if the positive and negative poles are reversed.
 - Ensure the microphone switch is ON.
 - Try to turn up the microphone volume.
 - Ensure the microphone is within the effective operating range (about 15 meters).

-  Cannot read files in USB flash disk/microSD (TF) card
- Ensure USB flash disk/microSD (TF) card is correctly inserted into the slot.
 - Ensure audio file in the USB flash disk/microSD (TF) card is MP3/WMA/WAV format. And the highest sampling rate supported is 48KHz; the highest bit rate supported by MP3 and WMA format is 320kbps; the highest bit rate supported by WAV format is 3072kbps; the maximum capacity supported is 64GB.

-  Cannot record or recording sound is small
- Ensure USB flash disk/microSD (TF) card is inserted and has enough capacity.
 - Try to turn up the music volume.

Manual Edition 1.0, Nov. 2018
IB-200-A30800-00

Edifier International Limited
P.O. Box 6264
General Post Office
Hong Kong

Tel: +852 2522 6989

Fax: +852 2522 1989

www.edifier.com

© 2018 Edifier International Limited. All rights reserved.

Printed in China

NOTICE:

For the need of technical improvement and system upgrade, information contained herein may be subject to change from time to time without prior notice.

Products of EDIFIER will be customized for different applications. Pictures and illustrations shown on this manual may be slightly different from actual product. Picture for reference only, actual product prevails.